

5632 DAC Fastino

Features

- 32-channel fast DAC
- 16-bit resolution
- 3 MSPS per channel
- Output voltage $\pm 10V$
- Gateware CIC interpolation
- HD68 connector
- Can be broken out to BNC/SMA/MCX

Applications

- Low-frequency arbitrary waveform generation
- Driving DC electrodes in ion traps

General Description

The 5632 DAC Fastino is a 4hp EEM module, part of the ARTIQ/Sinara family. It adds digital-analog conversion capabilities to carrier cards such as 1124 Kasli and 1125 Kasli-SoC. It is closely related to the slower 5432 DAC Zotino and the two cards share a compatible output interface.

It provides four groups of eight analog channels each, exposed by one HD68 connector. Each channel supports output voltage from -10 V to 10 V. All channels can be updated simultaneously. Channels can be broken out to BNC, SMA or MCX by adding external 5518 BNC-IDC, 5528 SMA-IDC or 5538 MCX-IDC cards.

Output voltage can be amplified to $\pm 50V$ with the 32-channel Sinara 5633 HV Amplifier mezzanine, which provides an identical output interface.



Figure 1: Fastino card

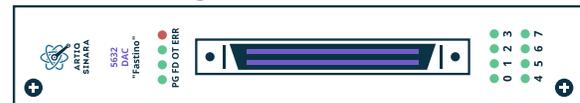


Figure 2: Fastino front panel

Source

5632 DAC Fastino, like all the Sinara hardware family, is open-source hardware, and design files (schematics, PCB layouts, BOMs) can be found in detail at the repository <https://github.com/sinara-hw/Fastino>.

Electrical Specifications

These specifications are based on the datasheet of the DAC IC (AD5542¹), and various information from the Sinara wiki².

Table 1: Output Specifications

Parameter	Min.	Typ.	Max.	Unit	Conditions
Sampling rate		3†		MSPS	per channel
Output voltage	-10		10	V	
Resolution ¹		16		bits	
Settling time ¹		1		µs	
Temperature coefficient ²			7	ppm	
3dB bandwidth		500		kHz	
Power consumption	7		13	W	

†Note that current QUARTIQ gateway supports 2.55 MSPS maximum.

The following table records cross-talk and transient behavior by Fastino, collected in various Sinara issues, see spur analysis³, cross-talk⁴, and noise summary⁵. DAC output during output noise measurement was 6.875 V, updating continuously, channel 27 used for recording.

Table 2: Electrical Characteristics

Parameter	Min.	Typ.	Max.	Unit	Conditions / Comments
DC cross-talk			-65	dBmV	
Output noise					over 1kHz bandwidth
@ 500 kHz		60	80	nV/rtHz	
@ 2 MHz			12	nV/rtHz	
@ 10 MHz			4	nV/rtHz	
Broadband noise					over 6.9kHz bandwidth
@ 100 kHz		56		nV/rtHz	
@ 1 MHz		14		nV/rtHz	
Spur-free range	0.1		5	MHz	Correctly configured ³
Digital update spurs		560		nV _{rm}	@ 2.55MHz

¹https://www.analog.com/media/en/technical-documentation/data-sheets/AD5512A_5542A.pdf

²<https://github.com/sinara-hw/Fastino/wiki>

³<https://github.com/sinara-hw/Fastino/issues/56>

⁴<https://github.com/sinara-hw/Fastino/issues/85>

⁵<https://github.com/sinara-hw/Fastino/issues/51>

LEDs

5632 DAC Fastino provides eight user LEDs in the front panel. These are directly accessible with ARTIQ RTIO. Four additional LEDs indicate, respectively, power good (PG), FPGA done (FD), overtemperature (OT), and gateway or initialization error (ERR).

ARTIQ System Description Entry

ARTIQ/Sinara firmware/gateway is generated according to a JSON system description file, allowing gateway to be specific to and optimized for a certain system configuration.

5632 DAC Fastino should be entered in the `peripherals` list of the corresponding core device in the following format:

```
{
  "type": "fastino",
  "ports": [0],
  "log2_width": 0 // select 0 to 5, default is 0
}
```

Replace 0 with the EEM port used on the core device. Any port may be used on the core device side. Fastino provides two EEM ports, of which ARTIQ always requires the first, EEM0. The second, EEM1, should not be used.

The `log2_width` field accepts a number from 0 to 5 inclusive and represents (in powers of two) the number of DAC channels packed into a single RTIO write (1 to 32). This allows and defines the use of `set_group()` functions rather than `set_dac()` as in examples given below.

Example ARTIQ Code

The sections below demonstrate simple usage scenarios of extensions on the ARTIQ control system. These extensions make use of the resources of the 5632 DAC Fastino. They do not exhaustively demonstrate all the features of the ARTIQ system.

The full documentation for ARTIQ software and gateway, including guides for their use, is available at <https://m-labs.hk/artiq/manual/>. Please consult the manual for details and reference material of the functions and structures used here.

Setting output voltage

The following example initializes the Fastino card, then emits 1.0 V, 2.0 V, 3.0 V and 4.0 V at channels 0, 1, 2, and 3 respectively. Voltage of all 4 channels is updated simultaneously with the use of `set_dac()`.

```
def prepare(self):
    self.channels = [0, 1, 2, 3]
    self.voltages = [1.0, 2.0, 3.0, 4.0]

@kernel
def run(self):
    self.core.reset()
    self.core.break_realtime()
    self.fastino.init()

    delay(1*ms)
    self.fastino.set_dac(self.voltages, self.channels)
```

Triangular wave

The following example generates a triangular waveform at 10 Hz, 16 V peak-to-peak. Timing accuracy of the RTIO system can be demonstrated by the precision of the frequency.

Import `scipy.signal` and `numpy` modules to run this example.

```
def prepare(self):
    self.period = 0.1*s
    self.sample = 128
    t = numpy.linspace(0, 1, self.sample)
    self.voltages = 8*signal.sawtooth(2*numpy.pi*t, 0.5)
    self.interval = self.period/self.sample

@kernel
def run(self):
    self.core.reset()
    self.core.break_realtime()
    self.fastino.init()

    delay(1*ms)

    counter = 0
    while True:
        self.fastino.set_dac([self.voltages[counter]], [0])
        counter = (counter + 1) % self.sample
        delay(self.interval)
```

CIC interpolators

Fastino gateway features dynamically configurable CIC (cubic B-spline) interpolators, defined individually by channel, with interpolation rates from 1 (2.55 MSPS) to 65536 (39 SPS). For more details, see manual documentation on ARTIQ driver functions `stage_cic` and `apply_cic`.

Ordering Information

To order, please visit <https://m-labs.hk> and choose 5632 DAC Fastino in the ARTIQ/Sinara hardware selection tool. Cards can be ordered as part of a fully-featured ARTIQ/Sinara crate or standalone through the 'Spare cards' option. Otherwise, orders can also be made by writing directly to <mailto:sales@m-labs.hk>.

Information furnished by M-Labs Limited is provided in good faith in the hope that it will be useful. However, no responsibility is assumed by M-Labs Limited for its use. Specifications may be subject to change without notice.